RLT-1000EX

ELECTRIC LINE TRIMMER

OPERATOR'S MANUAL (Original Instructions)

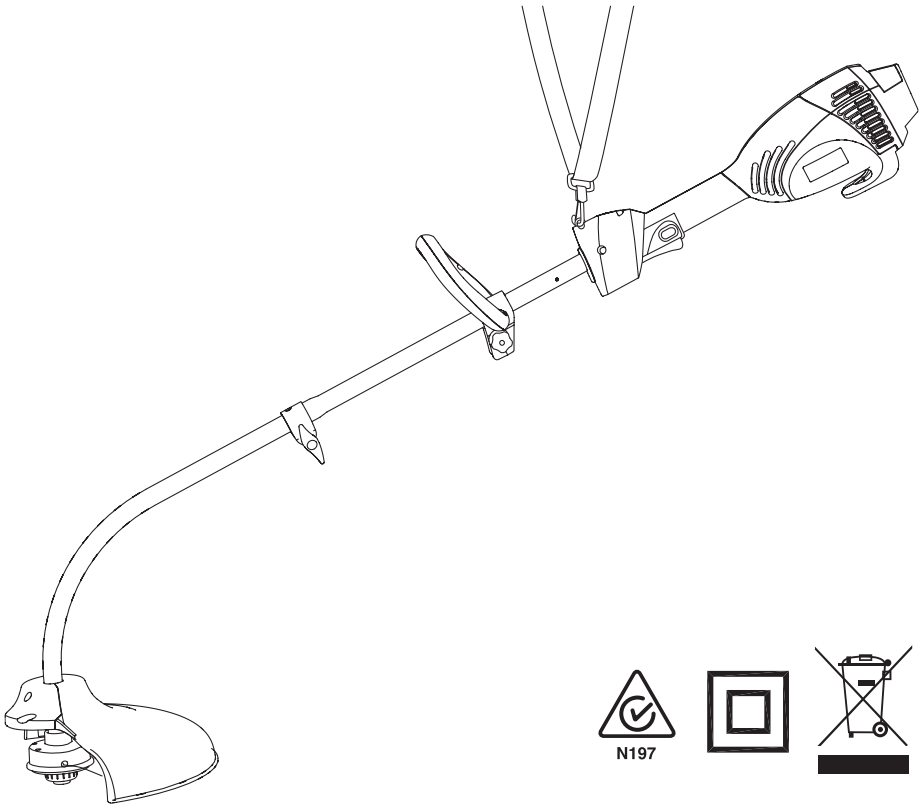

Important! It is essential that you read the instructions in this manual before operating this machine.

RYOBI RLT-1000EX

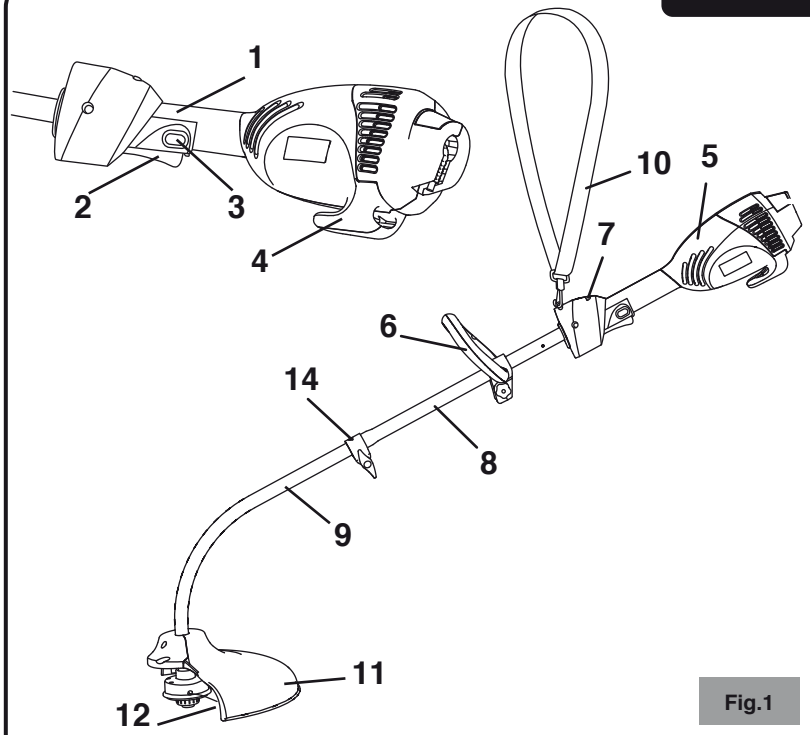

Fig.1

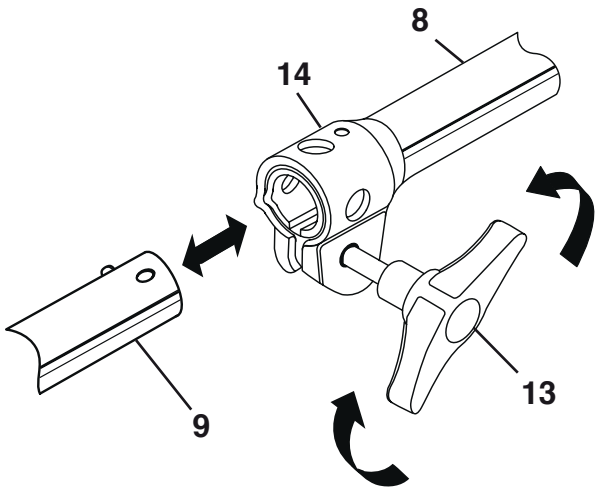

Fig.2

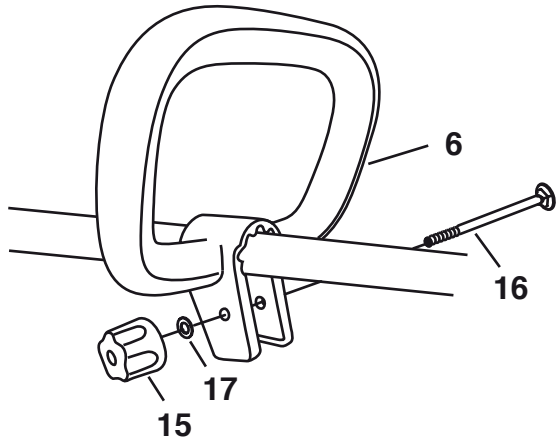

Fig.3

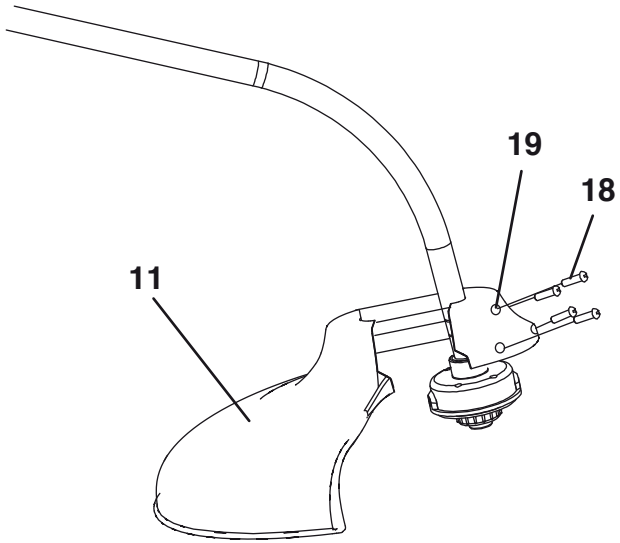

Fig.4

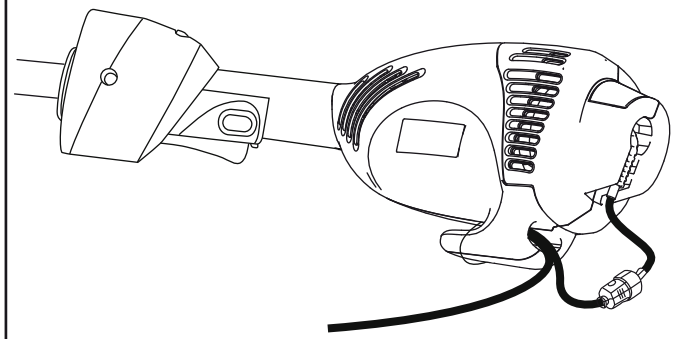

Fig.5

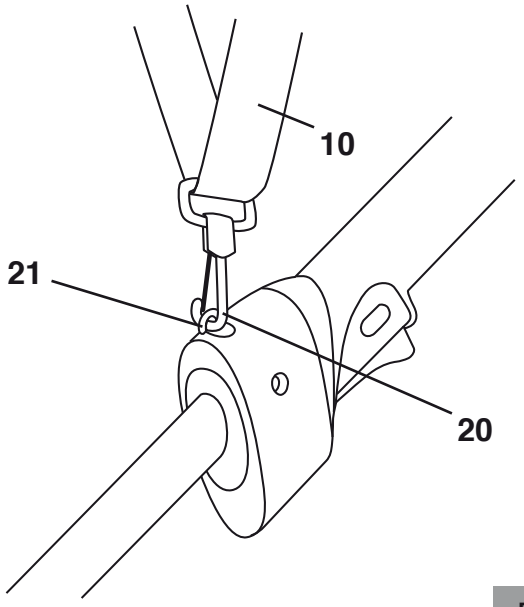

Fig.6

RYOBI RLT-1000EX

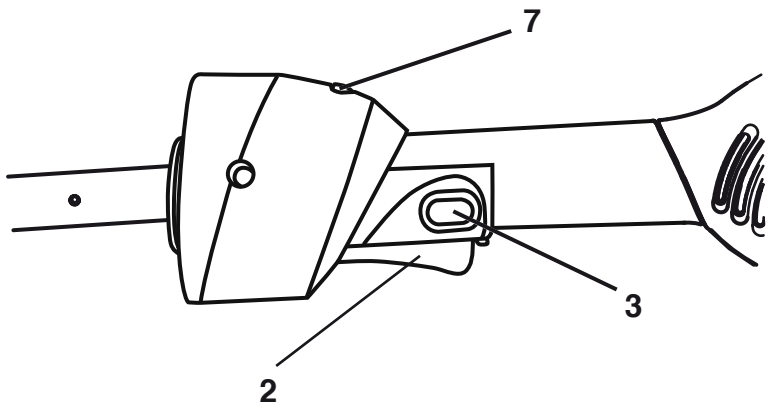

Fig.7

Fig.8

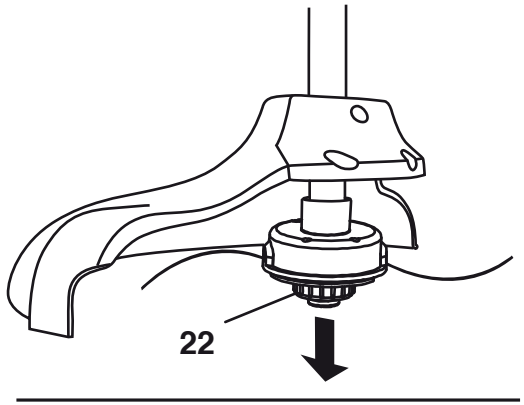

Fig.9

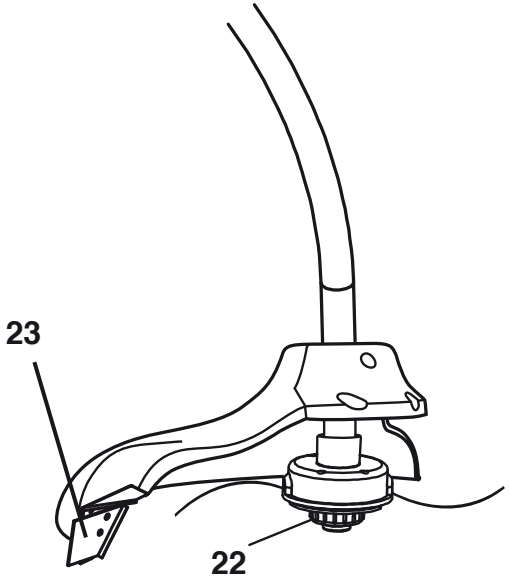

Fig.10

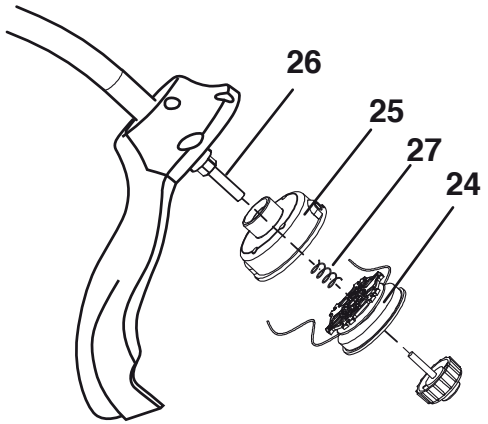

Fig.11

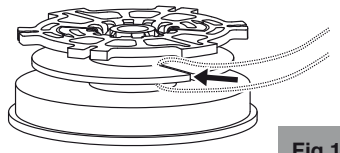

Fig.11a

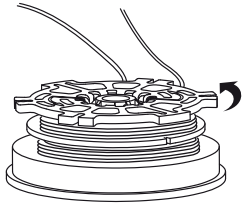

Fig.11b

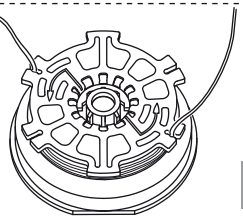

Fig.11c

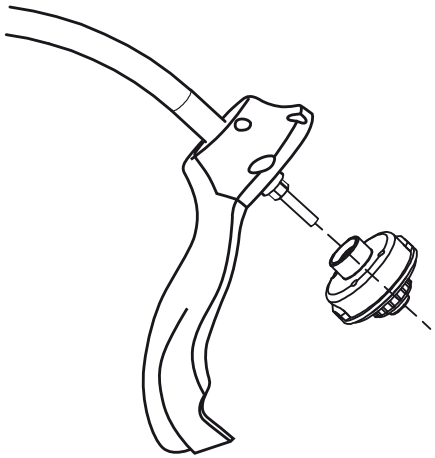

Fig.12

ENGLISH

Your line trimmer has been engineered and manufactured to Ryobi's high standard for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of rugged, trouble-free performance.

Thank you for buying a Ryobi product.

INTRODUCTION

This appliance is not intended for use by persons (including children) with reduced understanding, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

GENERAL SAFETY RULES

WARNING:
When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

READ ALL INSTRUCTIONS GENERAL SAFETY RULES

- Be familiar with the controls and proper use of the product.
- Clear the work area before each use. Remove all objects, such as rocks, broken glass, nails, wire or string that can be thrown or become entangled in the cutting line.
- Wear heavy, long trousers, boots and gloves. Do not wear loose fitting clothing, shorts or go bare foot. Do not wear jewelry of any kind.
- Secure hair above shoulder level to prevent entanglement in moving parts.
- Do not allow children or untrained individuals to use this product.
- Keep all by standers, especially children and pets, at least 15m from the operating area.
- Do not operate this product when you are tired, ill or under the influence of alcohol, drugs or medication.
- Do not operate in poor lighting. Use the unit only in daylight or good artificial light.
- Keep firm footing and balance. Do not over reach. Over reaching can result in loss of balance or exposure to hazards.
- Keep all parts of your body away from moving parts. Inspect the product before use. Replace any damaged parts before use.
- Do not operate the product in damp or wet locations.
- Do not use the product in the rain.
- Wear safety glasses or goggles when operating this product.
- Use the right product. Use the product for the intended purpose only.
- Do not handle the product with wet hands.
- Do not use the product if the switch does not turn the product on or off. A product that cannot be controlled with the switch is dangerous and must be repaired.
- Avoid accidental starting; never carry the product with your finger on the trigger.
- Stay alert and pay attention to what you are doing. Use common sense when using this product.
- Do not force the product. It will do a better job with less likelihood of a risk of injury when you operate it at the rate for which it was designed.
- Pull the plug out immediately if the mains or extension lead is damaged or severed.
- Disconnect the product from the power supply when it is not in use, before servicing and when changing accessories.

SPECIFIC SAFETY RULES

SPECIFIC TRIMMER SAFETY RULES

- Replace the trimmer head if cracked, chipped or damaged in any way. Be sure the trimmer head is properly installed and securely fastened.
- Make sure all guards straps, and handles are properly and securely attached.
- Use only the manufacturer's replacement line in the trimmer head.
- Never operate the product without the safety guard in place and in good condition.
- Use the product for cutting grass and light weeds only. Do not use for any other purpose.
- Before starting the product, position it so that the line does not come in contact with anything you do not intend to cut.
- Maintain a firm grip on both handles while trimming. Keep the trimmer head below waist level. Never cut with the trimmer head over 76 cm or more above the ground.
- Keep the working area free from wires, stones and debris.
- Do not cut against hard objects. This could cause injury or damage the trimmer.
- Do not use the trimmer to cut grass which is not in contact with the ground; for example, do not cut grass which is on walls or rocks etc.
- Always use your trimmer in an upright position.
- Keep hands away from the cutting line. Do not attempt to remove cut material or to hold material to be cut when the line is moving. Be sure to unplug the product before clearing jammed material from the line. Do not grasp the line when picking up or holding the product.
- Be cautious after turning off the product. The line coasts after turning off the product.
- Do not switch the trimmer on in enclosed or poorly ventilated spaces or in the presence of flammable and/or explosive substances such as liquids, gas and powders.
- Do not cross roads or gravel paths with the trimmer still running.
- Never fit metal cutting elements to the trimmer.

SPECIFIC SAFETY RULES

ELECTRICAL SAFETY RULES

- Make sure the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- Do not abuse the power cord. Never carry the product by the cord. Never pull the plug out of the power point by the cord. Keep the cord away from heat, oil and sharp edges.
- For outdoors work use only suitably approved extension cables with a min. conductor cross section of 1.5mm^2 The plug connectors must have earthing contacts and be rain-water-proof.
- Inspect extension cords for deterioration, cuts or cracks in the insulation. Repair or replace the cords if any defects appear.
- A nameplate on the product indicates the unit's voltage. Never connect the product to an AC voltage that differs from this voltage.
- If the power cord or extension cable becomes damaged during use, disconnect the cord from the supply immediately. DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.
- Electrical power should be supplied via a Residual Current Device (RCD) with a tripping current of not more than 30mA.

MAINTENANCE RULES

- Maintain the product with care. Follow instructions for changing accessories. Keep the product dry, clean and free from oil and grease.
- Unplug the product before making adjustments or repairs.
- Do not use the product if parts have been damaged. Check the product regularly to make sure that it will operate properly and perform the intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts and any other condition that may affect the unit operation. Inspect the unit's power connection. Any part that is damaged should be properly repaired or replaced by a Ryobi authorized service centre.
- Keep the product clean of grass clippings and other materials that may become lodged in the cutting lines and air vents.
- Never douse or squirt the product with water or any other liquid. Do not use detergents or solvents. Keep handles dry, clean and free from debris.
- After each use, clean with a soft, dry cloth.

WARNING:
Before carrying out any maintenance operations, cut off the electric power supply by disconnecting the plug from the mains.

- If the line cut-off blade is well worn or breaks, have this replaced by contacting an authorized service centre.

SERVICE RULES

- Service on this product must be performed by qualified repair personnel only. Service or maintenance performed by unqualified personnel could result in injury to the user and/or damage to the product. Such service may also void your warranty.
- Use only identical replacement parts when servicing the product. Follow the instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of shock, serious injury to the user and/or damage to the product. Such use may also void your warranty.

STORAGE AND TRANSPORTATION RULES

- Stop the motor when you are not trimming or when you are walking from one trimming location to another.
- Store the product inside in a dry place.
- Store the product up high or lock it up to prevent unauthorized use or damage. Keep the product out of the reach of children.
- Secure the product when transporting it.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan these instructions also.
- Never allow children or people unfamiliar with the instructions to use the machine.

TRAINING

- Read the instructions carefully. Be familiar with the controls and the proper use of the machine.
- Never allow people unfamiliar with these instructions or children to use the machine. Local regulations may restrict the age of the operator.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

PREPARATION

- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately. DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY. Do not use the appliance if the cord is damaged or worn.
- Never operate the machine while people, especially children, or pets are nearby.
- Wear eye protection and stout shoes at all times while operating the machine.

OPERATION

- Keep supply and extension cords away from cutting means.
- Use the machine only in daylight or good artificial light.
- Never operate the machine with damaged guards or shields or without guards or shields in place.

- Switch on the motor only when the hands and feet are away from the cutting means.
- Always disconnect the machine from the power supply (i.e. remove the plug from the mains or remove the disabling device)
  – whenever leaving the machine unattended;
  – before clearing a blockage;
  – before checking, cleaning or working on the machine;
  – after striking a foreign object;
  – whenever the machine starts vibrating abnormally.
- Take care against injury to feet and hands from the cutting means.
- Always ensure that the ventilation openings are kept clear of debris.

MAINTENANCE AND STORAGE

- Disconnect the machine from the power supply (i.e. remove the plug from the mains or remove the disabling device) before carrying out maintenance or cleaning work.
- Use only the manufacturer's recommended replacement parts and accessories.
- Inspect and maintain the machine regularly. Have the machine repaired only by an authorized repairer.
- When not in use, store the machine out of the reach of children.

SYMBOLS

Some of the following symbols may be used on your tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool more safely and effectively.

SYMBOL	EXPLANATION
	Warning! Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	Read this safety and operating instructions in this booklet and keep it in a safe place for future reference.
	Wear eye protection.
	Do not expose to moisture
	Keep all bystanders away.
	Disconnect the mains plug if the cord is damaged or entangled.
	Beware of thrown or flying objects to bystanders. Keep bystanders a safe distance away from the machine.

ENGLISH

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest **AUTHORISED SERVICE CENTRE** for repair. When servicing, use only identical replacement parts.

WARNING:

Observe all normal safety precautions related to avoiding electrical shock.

WARNING:

To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. Save this operator's manual and review frequently for continuing safe operation and instructing others who may use this product.

WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection.

SAVE THESE INSTRUCTIONS

ENGLISH

SPECIFICATIONS

Voltage..... 230-240V~50Hz
Nameplate Power..... 1000W
No Load Speed.....7,000/min
Cutting Line 1.5mm
Max.Cutting Path. .....380 mm
Measured Sound Power Level ..... L_{WA}: 90.9dB(A)
Sound Pressure Level ..... L_{PA}:79.2dB(A); K_{PA}: 3.0dB(A)
Vibration ..... 4.8m/s^2, K=1,5m/s^2
Weight .....4.8 kg

DESCRIPTION

1. Trigger handle
2. Trigger
3. Lock button
4. Cord retainer
5. Motor housing
6. Front handle
7. LiveTool Indicator
8. Upper shaft
9. Lower shaft
10. Shoulder strap
11. Safety guard
12. Cutting line
13. Wing nut
14. Coupler
15. Knob nut
16. Bolt
17. Washer
18. Screws
19. Bracket
20. Clip
21. Loop
22. Bump knob
23. Cut off blade
24. Spool
25. Trimmer head
26. Drive shaft
27. Spring

ASSEMBLY

CONNECTING LOWER SHAFT TO THE UPPER SHAFT (FIG.2)

WARNING:

The split shaft is for transport and storage purposes only. The electric power head is not recommended for use with any other attachment.

The coupler (item 14) connects the lower shaft to the upper shaft. Follow these steps to connect the lower shaft to the upper shaft.

- Loosen the wing nut (item13) by turning it counterclockwise.
- Remove any end cap from the lower shaft.
- Align the button with the guide recess on the upper shaft.
- Slide the lower shaft (item9) into the upper shaft (item8) until the two shafts click into place.

  NOTE: If the button does not release completely in the positioning hole, the shafts are not locked. Slightly rotate the lower shaft until the button is locked into place.
- Tighten the wing nut (item13) securely by turning it clockwise.

  NOTE: During operation, periodically check the wing nut (item13) and tighten as necessary.

REMOVING THE LOWER SHAFT FROM THE UPPER SHAFT (FIG.2)

Disconnect the upper shaft and lower shaft for storage or when transporting.

Follow these steps to remove the lower shaft from the upper shaft.

- Release the trigger (item 2) and allow the trimmer to coast to a stop.
- Unplug the trimmer.
- Loosen the wing nut (item 13) by turning it counterclockwise.
- Push the button, while pulling the two shafts apart.

ATTACHING THE FRONT HANDLE (FIG.3)

Follow these steps to attach the front handle.

- Press the front handle (item 6) onto the upper shaft (item 8) so that the handle is angled back toward the trigger handle (item 1).
- Place the front handle along the upper shaft to a position that allows for comfortable operation.
- Slide the bolt (item 16) through the holes in the front handle.
- Slide the washer (item 17) onto the bolt.

ASSEMBLY

- Place the knob nut (item 15) onto the bolt and tighten the knob nut securely.

ATTACHING THE SAFETY GUARD (FIG.4)

Follow these steps to attach the safety guard.

- Place the safety guard (item 11) around the lower shaft and align with the bracket (item 19).
- Install the screws (item 18) through the holes and tighten the safety guard.

EXTENSION CORD RETAINER (FIG.5)

An extension cord retainer (item 4) is located on the bottom of the trimmer. This provides strain relief for the cord, preventing unwanted disconnects.

- Use the extension cord retainer when you connect the extension cord to the power cord to prevent disconnection. Use only an outdoor approved extension cord.
- Loop the extension cord through the extension cord retainer slot located on the bottom end of the trimmer.
- Pull loop of extension cord around tongue and pull tight.
- Attach extension cord to plug on trimmer.

SHOULDER STRAP (FIG.6)

A shoulder strap (item 10) is supplied for your greater comfort.

- Simply attach the clip(item 20) of the shoulder strap onto the loop (item 21) at the front of the motor housing (item 5).

OPERATION

INTENDED USE

This grass trimmer is designed for cutting grass and similar soft vegetation in private and hobby garden areas which are not accessible with a lawn mower.

The device is not allowed to be used in public gardens, parks, sports centers or at roadsides as well as in agriculture and forestry.

This line trimmer is not allowed to be used for cutting or chopping hedges, shrubs, bushes or flowers.

⚠ WARNING:

The product may throw objects during operation, causing injury to the operator or to bystanders. Always wear suitable eye protection, boots, gloves and long, heavy trousers while operating the product.

STARTING AND STOPPING THE TRIMMER (FIG.7)

- To start the trimmer: press the lock button (item 3) and then press the trigger (item 2). Release the lock button once the motor has started.
- To stop the trimmer: Release the trigger.

OPERATING THE TRIMMER (FIG.8)

Follow these steps to operate the trimmer.

- Plug the trimmer cord into an extension cord approved for outdoor use. Refer to “Electrical Safety Rules” earlier in this manual.
- Once the unit is connected to electric power, the LiveTool Indicator (item 7) will show a blue light.
- Put the shoulder strap (item 10) over your shoulder opposite side to the unit. Adjust shoulder strap to the most comfortable length.
- Hold the trimmer with your right hand on the trigger handle and your left hand on the front handle.

  NOTE: Keep a firm grip with both hands during operation.
- Place the trimmer on the side of your body with the motor behind and away from your body.
- Press the lock button and then the trigger to start the trimmer.
- The trimmer will build up speed steadily.
- Trim grass and weeds in a right-to-left motion with the line parallel to the ground.

NOTE:

If the machine is overloaded, thermal protection inside the unit will cut off the trimmer. Leave the trimmer for about 10 minutes before turning it ON again. The line trimmer should then start.

- To switch off the line trimmer, simply release the trigger.

⚠ WARNING:

After switching off, the nylon line will continue to rotate for a few more seconds. Maintain vigilance until the line completely stops.

CUTTING TIPS

- Inspect and clear the area to be trimmed for any rocks, broken glass or wire that could be thrown or become entangled in the cutting line. Trim only when grass or weeds are dry . Keep the cutting line parallel to the ground.
- Cut grass or weeds over 20cm tall from the top to the bottom in small amounts. This will prevent grass becoming wrapped around the trimmer head assembly, which may result in damage due to overheating. If grass becomes wrapped around the trimmer head assembly, stop the trimmer, unplug it and remove the grass.
- Move the trimmer slowly in and out of the area you are cutting, keeping the trimmer at the desired cutting height.
- Use the tip of the line to do the cutting. Do not force the trimmer head assembly into uncut grass.
- Feed out some line as required during use to prevent the line from retracting into the cutting head.

OPERATION

- The tip of the cutting line will wear during use; this reduces the cutting swath. If the line is not advanced occasionally, it will wear down to the eyelet. When the trimmer stops, the line tends to relax and may retract into the trimmer head assembly. Should this occur, unplug the trimmer, remove the spool, refeed the line through the eyelets and reassemble the spool.
- Avoid hitting objects with the line, such as chain-link fences or concrete, as this causes rapid wear.
- Never drag the trimmer head assembly on the ground while trimming.

ADVANCING THE CUTTING LINE (FIG.9)

The trimmer includes the EZ Line™ Tap Advance System. Follow these steps to advance the cutting line automatically.

- Tap the bump knob (item 22) lightly on the ground while the motor is running. Do not hold the bump knob on the ground.

  NOTE: The line cutting off blade (item 23) on the safety guard will cut the line to the proper length.

  NOTE: To help prevent line tangle, tap only once to lengthen the line. If additional line is required, wait a few seconds before retapping the bump knob. Keep the line length at or near full cutting diameter.

SAFETY GUARD LINE TRIMMING CUT-OFF BLADE (FIG.10)

This trimmer is equipped with a line trimming cut-off blade (item 23) on the safety guard. For best cutting, advance line until it is trimmed to length by the cut-off blade. Advance line whenever you hear the engine running faster than normal. This will maintain best performance and keep line long enough to advance properly.

Use only identical Ryobi replacement parts when servicing this product. Use of any other parts may create a hazard or cause product damage.

REPLACING THE SPOOL (FIG.11 & FIG.12)

When your cutting line wears out, replacement spools are available through our local retailer.

- Release the trigger.
- Unplug the trimmer.

Make sure the trimmer head stops rotating. Contact with a rotating trimmer head could cause personal injury.

- Remove the bump knob by turning it counterclockwise.
- Remove the empty spool (item 24).
- Clean the trimmer head (item 25) thoroughly. Inspect the trimmer head for any damaged or worn parts.

MAINTENANCE

- Hold the spool so that its tabbed side is positioned upward. On the new spool, the ends of the lines are secured in slots on tabs. Release the line from the tabs, unwind approximately 15cm of line and resecure the lines in the tabs.

  * Ensure that the bump head spring is correctly positioned between the trimmer head and the spool.
- Insert the lines on the new spool into the eyelets on the trimmer head.
- Place the spool on the drive shaft (item 26).

  To install the spool, you may need to rotate it slightly.

  If the line should tangle or break at the eyelets,remove the spool, refeed the line through the eyelets and reassemble the spool on the trimmer.
- Release the lines from the tabs by sharply pulling each line while pushing down on the spool.
- Push down on the spool to reveal the drive shaft.
- Place the bump knob on the drive shaft.

⚠ WARNING:

Switch off and disconnect from the mains supply before replacing the cutting line, adjusting or cleaning your trimmer.

REPLACING THE CUTTING LINE

- Remove the empty spool (Item 24) from the cutting head
- The spool requires 10m lengths of 1.5mm twist cutting line.
- Find the middle of the cut length of line and insert into the slot on the centre of the spool, then wind neatly in the direction of the arrows. (see fig.11a and fig.11b)
- Secure the lines to the holding slots on the top of the spool. (see fig.11c)
- Feed the lines through the eyelets of the cutting head whilst inserting the spool.
- Release the lines from the holding slots by sharply pulling each line while pushing down on the spool.
- Replace the bump knob on the drive shaft.

ENGLISH

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Line will not advance when tapping bump button	1. Line is welded to itself. 2. Not enough line on spool. 3. Line is worn too short. 4. Line is tangled on spool.	1. Lubricate with a silicone spray. 2. Install more line (Refer to “Replacing replacement spool” earlier in this manual). 3. Pull lines while alternately pressing down on and releasing bump button.
Bump head is hard to turn	Grass wrapped or built up around head.	Clean affected parts of the machine.
Grass wraps around the attachment shaft and the trimmer head assembly	Cutting tall grass at ground level.	Cut tall grass from the top down.
Liner trimmer stops and will not start again	1) Overload protection activated 2) Fuse from main supply blown 3) Unit failed	1) Wait 10 minutes before restarting 2) Check fuse 3) Contact dealer to check damage

DIPOSAL

Waste electrical products should not be disposed of together with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

LIMITED WARRANTY

TTI warrants this outdoor product to be free of defects in material and workmanship for 24 months from the date of purchase by the original purchaser, subject to the limitations below. Please keep your invoice as proof of date of purchase.

This warranty is only applicable where the product is used for personal and non-commercial purposes. This warranty does not cover damage or liability caused by / due to misuse, abuse, accidental or intentional acts by user, improper handling, unreasonable use, negligence, failure by end user to follow operating procedures outlined in the user's manual, attempted repair by non-qualified professional, unauthorized repair, modification, or use of accessories and/or attachments not specifically recommended by authorized party. Please see your local dealer for list of authorized service centers in your area.

This warranty does not cover belts, brushes, bags, bulbs or any part which ordinary wear and tear results in required replacement during warranty period. This warranty does not cover transportation cost or consumable items such as fuses and batteries.

This limited warranty is void if the product's original identification (trade mark, serial number, etc.) markings have been defaced, altered or removed or if product is not purchased from an authorized reseller or if product is sold AS IS and / or WITH ALL FAULTS.

Where permitted, the provisions of this limited warranty are in lieu of any other written warranty, whether express or implied, written or oral, including any warranty of MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. OUR MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT.

This warranty is valid only in the European Union, Australia and New Zealand. Outside these areas, please contact your authorized Ryobi dealer to determine if another warranty applies.

TECHTRONIC INDUSTRIES EMEA
Medina House, Field House Lane,
Marlow, Bucks
SL7 1TB - United Kingdom

RYOBI TECHNOLOGIES (UK) LIMITED.
Medina House, Field House Lane,
Marlow, Bucks
SL7 1TB - United Kingdom
Tel: + 44 (0) 1628 894400
Fax: + 44 (0) 1628 894401
Technical Helpline : + 44 (0) 800 389 0305

TECHTRONIC INDUSTRIES FRANCE SAS
Immeuble Le Grand Roissy
Z.A. du Gué - 35 rue de Guivry
77990 LE MESNIL AMELOT FRANCE
Phone: + 33(0)1 60 94 69 70
Fax: + 33(0)1 60 94 69 79

RYOBI BELGIUM
Avenue des Pâquerettes, 55
Zoning artisanal - bâtiment 5
B - 1410 Waterloo, BELGIQUE
Tel : + 32(0) 2357 8140
Fax : + 32(0) 2357 8149

TTI ITALIA SRL
Via Fratelli Gracchi, 39
20092 Cinisello Balsamo (MI)
Italia
Tel : + 39(0) 5923 8408
Fax : + 39(0) 5924 6960

TECHTONIC INDUSTRIES IBERIA S.L
Av. De la Industria,52
Coslada – Madrid – España
Tel: 91 485 12 10

TECHTRONIC INDUSTRIES SOUTH AFRICA CO. (PTY) LTD
P.O Box 83888, South Hills,
Johannesburg, 2136
South Africa

TECHTRONIC INDUSTRIES (ASIA) CO., LTD.
24/F, CDW Building,
388 Castle Peak Road,
Tsuen Wan, Hong Kong.
Tel : + 852 2402 6888

RYOBI TECHNOLOGIES GMBH
Itterpark 4, D-40724 Hilden
DEUTSCHLAND
Tel: + 49 (0) 2103 2958-0
Fax: + 49 (0) 2103 2958-29

RYOBI TECHNOLOGIES GMBH
Vertriebsbüro Österreich
Schinitzgasse 13
A-8605 Kapfenberg
Tel.: + 43 (0) 3862 23590-0
Fax: + 43 (0) 3862 23590-25

TECHTRONIC INDUSTRIES AUSTRALIA PTY LIMITED.
Building B, Rosehill Industrial Estate,
3 Shirley Street,
Rosehill NSW 2142
AUSTRALIA
Tel: (02) 8892 1800 or 1300 361 505
Fax: 1800 807 993

TECHTRONIC INDUSTRIES (NZ) LIMITED.
27 Clemow Drive, Mt Wellington
PO Box 12-806, Penrose, Auckland
NEW ZEALAND
Tel: + 64 (0) 9 573 0230
Free Call: +64 0800 279 624
Fax: + 64 (0) 9 573 0231

A&M MIDDLE EAST FZCO
P.O.Box 61254
Jedel Ali, Dubai,
UNITED ARAB EMIRATES
Tel.: + 9714 8861399
Fax: + 9714 8861400

TECHTRONIC INDUSTRIES DENMARK APS
Stamholmen 147, 4.
DK-2650 Hvidovre
Denmark
Tlf 43 56 55 55, Fax 43 56 55 56
E-mail: kundeservice@tti-emea.com

TECHTRONIC INDUSTRIES NORWAY AS
Tlf.: 800 12 493, Faks: 800 12 492
E-mail: kundetjeneste@tti-emea.com

TECHTRONIC INDUSTRIES SWEDEN AB
Tel (+46) 08 24 60 30. fax (+46) 08 24 60 31.
E-mail: kundtjanst@tti-emea.com

TECHTRONIC INDUSTRIES FINLAND OY
Tel. 0800 1 09000, Fax 0800 1 09001
Email: asiakaspalvelu@tti-emea.com

Machine: **ELECTRIC LINE TRIMMER**
Name of company: Homelite Far East Co., Ltd.
Address: 24/F, CDW Building,
388 Castle Peak Road,
Tsuen Wan Hong Kong.

Type: **RLT-1000EX**
Name / title: Andrew John Eyre BEng CEng MIET
Vice President of Engineering
Signature: